

BY SENTEY

**52** Bluetooth Speaker



## USER MANUAL

Before using your speaker, please read the user manual carefully for proper use and maintenance. Thank you for your purchase of the B-Trek S2 Bluetooth speaker. Please read the manual carefully before using your speaker as it will provide you with information to operate and maintain your speaker correctiv.

 
## SPECIFICATIONS

Microphone Directivity	Omnidirectional	
Battery Capacity	400mAh	
Battery Life	Up to 5 hours (via Bluetooth)	
	Up to 6 hours (via AUX Line in input)	
Speakers	Speaker	Mono
	Drive Diameter	ø45 mm
	Impedance	4Ω
	Frequency Response	20Hz~18KHz
	Output Power	3W
	Signal to Noise Ratio	≥95dB
	T.H.D.	1%
	Sensitibity (S.P.L.)	95dB±2dB
Bluetooth Version	V2.1	
Bluetooth Range	33FT (10 m)	
Bluetooth Profiles	A2DP, AVRCP, Headset, Handsfree profile	

### FEATURES

- Portable and compact design to take anywhere
- Bluetooth technology with 10m (30ft) range
- · Hands free function on Bluetooth mode and compatible phone.
- AUX line in to allow direct connection to any device through a 3.5mm audio cable
- microSD slot to play mp3 files directly from the memory card
   FM radio mode to allow you to listen to FM radio
- Battery charges through micro USB cable

## BLITTON FUNCTIONALITY & DIAGRAM



- 1 Mode change
- Previous track/volume down
- 3 Next track /Volume up
- 4 Play/Pause/Answer phone
- 5 LED indicator
- (6) Lanyard

- (7) Battery cover
- (8) micro SD card port
- AUX line in
- (0) On/Off Switch
- 11 Charging port (5V/Micro USB)

# OPERATIONAL INSTRUCTIONS

## 1. BASIC OPERATION

- Move the On/Off switch to the On position to power on the speaker.
- Press the mode change button (\*\*) to toggle between modes
   Bluetooth/FM Radio/AUX line in/micro SD card read.
- Press the play/pause/answer button (<a>) to pause or Play a song,</a>
  pick up a phone call when in Bluetooth hands free mode, or do a station
  scan when in FM mode.
- Press the previous/volume down or next/volume up buttons (♠ ➡) to change to the next or previous song or to step through the next station frequency when in FM mode.
- Press and Hold the previous/volume down or next/volume up button ( △ → ♥) to adjust the volume accordingly.

## 2. BLUETOOTH OPERATION

- Pairing: When the speaker is in Bluetooth mode it will automatically be in pairing mode if not already paired to a device. Search for B-Trek 52 in your device's pairing screen and select to connect it. If asked for a pairing code or password enter 0000 (four zeroes). If not in a pairing mode press the mode change button (\*\*) until the indicator LED flashes between red and hive
- Music playback & Volume can be controlled from the device or the speaker by using the Basic Operation instructions above.
- Hands Free: If the speaker is paired with a mobile phone, it will function as a hands free device. When you have an incoming call press the play/pause/answer button (<sup>3</sup>) to answer. Hold the play/pause/answer button (<sup>3</sup>) for 3 second to reject the call. You can also press the play/pause/answer button (<sup>3</sup>) quickly twice to redial the previous call.

#### 3 FM OPERATION

- Press the mode change button ( (\*\*) to toggle between modes and enter the FM Radio mode.
- Press the previous/volume down or next/volume up buttons ( ¬ → ) to step through each FM frequency in the indicated direction.
- Press the play/pause/answer button (

   ) to scan for FM stations
   automatically. The speaker will stop when it finds a strong signal.
- The volume can be controlled as indicated in the Basic Operation above.

# 4 ALIX LINE IN OPERATION

- Inserting a 3.5mm auxiliary audio cable into the AUX line in port will automatically set the speaker in the AUX line in mode, If you already had a 3.5mm audio cable inserted and were in another mode, you can press the mode change button (60 to the vole into the AUX line in mode).
  - The volume can be controlled as indicated in the Basic Operation above.
  - Music playback can be controlled from the device or the speaker (if the connected device supports commands through 3.5mm audio cable) by using the Basic Operation instructions above

#### 5 MICRO SD OPERATION

- Inserting a micro SD card into the micro SD card port will automatically set the speaker in the micro SD card read mode. If you already had a micro SD card inserter and were in another mode, you can press the mode change button ( ) to toggle into the micro SD card read mode.
- Only MP3 file that are on the micro SD card can be read and played by the speaker.
- Music playback & Volume can be controlled from the speaker by using the Basic Operation instructions above.

## 6. CHARGING OPERATION

- Connect the speaker to a laptop, computer, power bank, or power adapter with the Micro USB cable included (SV/500mA) through the charging port. The LED indicator will turn solid red while charging and will turn off when fully charged.
- Please charge the battery fully before the first use of the speaker.

### ADDITIONAL INFORMATION

Hands free functionality is only available in the Bluetooth mode and on mobile phone that support the hands free Bluetooth profile.

Do not use the speaker in water

Avoid using the speaker in extremely humid environments

Avoid placing the speaker near strong magnets or strong magnetic fields. LED indicators are as follows:

- · Alternate flashing between red and blue: Bluetooth pairing mode
- · Flashing blue: Bluetooth mode (connected)
- Flashing red: FM Radio mode
- Solid red and blue: AUX line in mode
   East flashing blue: micro SD card mode
- Fast flashing blue: micro SD card moi
   Solid red: Charging (in any mode)
- en DOWNLOAD ENGLISH PDF MANUAL AT:
- http://www.sentey.com/en/support
  - DESCARGA DE MANUAL EN FORMATO PDF EN ESPAÑOL: http://www.sentev.com/es/support
  - DOWNLOAD DO MANUAL PORTUGUÊS EM FORMATO PDF:





B-TREK S2 MODELS: LS-4060 (Black) / LS-4061 (White) / LS-4062 (Blue) / LS-4063 (Red) / LS-4064 (Pink) / LS-4065 (Purple).



Toll Free Number
USA 1-855-75ENTEY (1-855-773-6839)

For More Information www.sentey.com - info@sentey.com